




WEG Motorflens B14A

Montage set bestaat uit:

Flens, bouten t.b.v. montage, interne lagerschaal (indien noodzakelijk) en plug condensgat

Standaard coating: RAL 5009

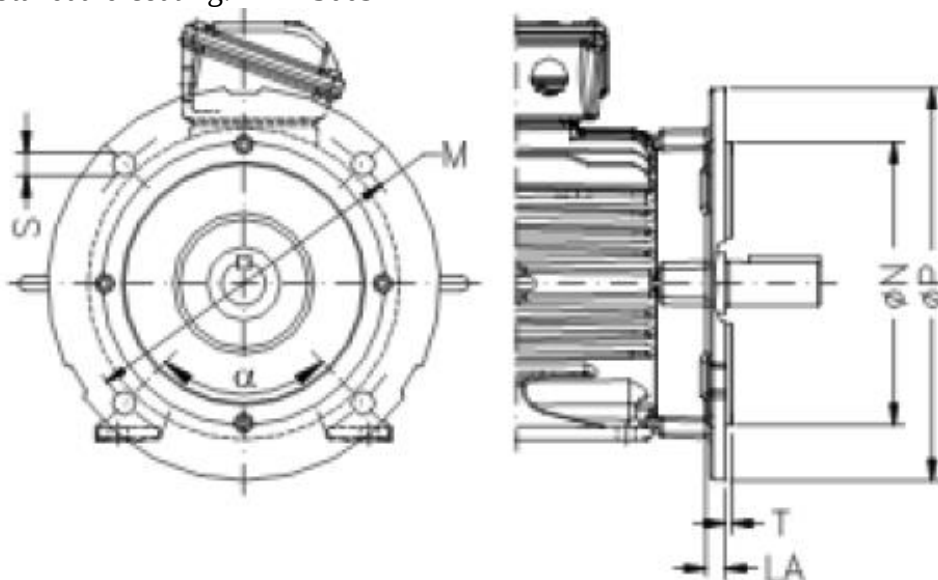

Flange "FF"									
Frame	Flange	LA	M	N	P	S	T	α	Nº of holes
63	FF-115	9	115	95	140	10	3	45°	4
71	FF-130		130	110	160		3,5		
80	FF-165	10	165	130	200	12			
90									
100	FF-215	11	215	180	250	15	5		
112									
132	FF-265	12	265	230	300	19	5		
160	FF-300	18	300	250	350				
180									
200	FF-350	18	350	300	400	19	5		
225	FF-400		400	350	450				
250	FF-500	500						450	550
280									
315	FF-600	22	600	550	660	24	6		
355	FF-740		740	680	800/880*				